



РУССКИЙ

Описание

- Насадка-концентратор
- Решетка воздухозаборника
- Переключатель режимов работы (0/1/2)
- Петелька для подвешивания

ВНИМАНИЕ!

Не используйте устройство вблизи емкостей, содержащих воду (рядом с ванной, бассейном и т.п.).
- При работе устройства от сети после его эксплуатации, полностью размотайте сетевой шнур. Вставьте вилку сетевого шнура из розетки, так как близость воды представляет опасность, даже когда фен выключен выключателем;
- Для дополнительной защиты целесообразно установить устройство защитного отключения (УЗО) с номинальным током срабатывания, не превышающим 30 мА, в цепь питания вашей комнаты; при установке следите обратиться к специалисту;

МЕРЫ ПРЕДОСТОРЖНОСТИ

Внимательно прочтите инструкцию по эксплуатации, соблюдайте ее указания и сохраните ее!

Во избежание риска возникновения пожара или поражения электрическим током:

- Перед включением убедитесь, что напряжение электрической сети соответствует рабочему напряжению устройства.
- Не используйте устройство в не помещении.
- Используйте устройство только по его прямому назначению.
- Никогда не оставляйте работающее устройство без присмотра.

Создание стиля прически
Установите переключатель (3) в положение «1», установите на фен насадку-концентратор (1) для направленного потока воздуха.

Распределите волосы на пряди и создайте нужный стиль с помощью круглой щетки для укладки волос. Во время создания прически направляйте воздушный поток непосредственно на волосы в желаемом направлении. При необходимости можно направлять струю воздуха на каждую прядь в течение 2-5 секунд для закрепления волос.

Styling
Set the switch (3) to the "1" position, set the concentrator attachment (1) on the unit for directed air flow.

Divide hair into strands and create a style using a round brush for styling. While creating a style direct the air flow at the hair in the desired direction. If necessary, direct the air flow at each strand during 2-5 seconds to fix your hair.

Concentrator attachment
- Connect the concentrator attachment (1) to the housing of the unit. This attachment allows directing narrow air flow of high intensity to a certain strand of hair.

- Do not place or store the appliance in places where it can fall into a tub or sink that is filled with water; do not immerse the unit into water or other liquids.

- Plug the unit. Use the switch (3) to set the required operation mode.

Care and cleaning
The unit is intended for household usage only.

- Set the switch (3) to the "0" position and disconnect the hair-dryer.

- The housing of the hair-dryer can be cleaned with a wet cloth. After that, it is necessary to dry the housing.

- Never immerse the housing of the appliance into water or other liquids.

- Do not use abrasives and solvents to clean the unit.

Storage
- Always unplug the hair-dryer if it is not being used.

- After using let the hair-dryer to cool down and keep it in a dry place away from children.

- Do not use the unit to style wet synthetic hair or wigs.

- Do not direct hot air into your eyes or other parts of your body, which are sensitive to heat.

- Never wind the cord around the hair-dryer. It can cause damage to the hair-dryer. Handle the cord with care, do not pull, twist or strain the cord especially in the area near the plug and at the place where the hair-dryer is entering the housing. Untwist the cord if it has been twisted in the process of operation.

- To make using the appliance comfortable there is a hanger loop (4) on the housing of the unit, you can keep the air openings free of lint, dust and hair vivid.

- Avoid hair getting into air inlet grid during operation of the unit.

- Do not use the unit and do not place the power cord near heating sources.

- Before using the unit unwind the cord at full length.

- The power cord should not:

- touch hot objects,

- run through sharp edges,

- be used as a carrying handle.

- Periodically check the integrity of the power cord.

- Never use the unit if the power cord or plug are damaged, if the unit works electrically or falls into water. Apply to the authorized service centre for repair.

- Before you take the unit away, let it cool down, do not wind the power cord around the unit.

TECHNISCHE ХАРАКТЕРИСТИКИ
Электропитание: 220-240 В ~ 50 Гц
Мощность: 1200 Вт

Производитель сохраняет за собой право изменять дизайн и технические характеристики прибора без предварительного уведомления.

Срок службы прибора - 3 года

Данное изделие соответствует всем требуемым европейским и российским стандартам безопасности и гигиены.

Изготовитель: ТУШКОМ ТРЕЙДИНГ ЛИМИТЕД

РЕСПУБЛИКА КИПР,

Адрес: Кипр, Тисеос, 4, Энгоми, а/я 2413, Никосия.

Сделано в Китае

ENGLISH

Description

- Concentrator attachment
- Air inlet grid
- Operating modes switch (0/1/2)
- Hanger loop

ATTENTION!

Do not use the unit near objects filled with water (bath-tub, swimming pool etc.).

- When using the hair dryer in a bathroom, disconnect it immediately after use, pull the plug out of the socket. Insert the switch (3) to set the required operation mode:

"0" – off;

"1" – warm air supply for hair drying and soft styling;

"2" – hot air supply for quick drying and sophisticated hair-do;

Hair Care

To get best results (before drying or styling) wash your hair with shampoo, dry it with a towel and comb your hair.

Quick drying

Set the switch (3) to the utmost heating position "2". Shake off from your hair excessive moisture with your hand or a comb and constantly move the hair-dryer over your head.

Safety measures

Carefully read the operation manual, follow all the instructions and keep it for future reference!

To avoid fire hazard or electric shock:

- Before using, make sure that your home electricity supply system corresponds to the voltage specified on the housing of the unit.
- It is not guaranteed that the Gerät auf der Räumlichkeiten zu nutzen.

• Do not use the unit outdoors.

• Use the hair-dryer only for its intended purpose.

• Never leave the operating hair-dryer unattended.

• Do not use the hair-dryer where aerosol is being sprayed or near inflammable liquids.

• Always unplug the hair-dryer immediately after usage and before cleaning.

When unplugging the unit take hold of the plug; do not pull the cord.

• Do not touch the plug with wet hands.

• Do not place or store the appliance in places where it can fall into a tub or sink that is filled with water; do not immerse the unit into water or other liquids.

• Do not operate the unit while taking a bath.

• Sollte das Gerät einmal ins Wasser fallen, ziehen Sie sofort den Netzstecker aus der Steckdose, danach können Sie das Gerät aus dem Wasser holen.

• Es ist nicht gestattet, das Gerät auf der Räumlichkeiten zu nutzen.

• Schalten Sie den Haartrockner in die Steckdose ein. Wählen Sie die gewünschte Betriebsstufe mit dem Schalter (3).

• Setzen Sie den Ondulierduse (1) auf den Haartrockner zwecks des gerichteten Luftstroms.

Verteilen Sie die Haare in Strähnen und schaffen Sie den gewünschten Stil mit der runden Stylingbürste. Während des Stylings richten Sie den Luftstrom unmittelbar auf Haare in der gewünschten Richtung. Bei der Notwendigkeit richten Sie den Luftstrom ca. 2-5 Sekunden auf jede einzelne Strähne, um die Haare zu fixieren.

Die Zeit, für die das Haarstyling notwendig ist, wird selbstständig gewählt und hängt vom Haartyp ab.

• Ziehen Sie den Netzstecker mit nassen Händen aus der Steckdose.

• Es ist nicht gestattet, das Gerät in den Stellen aufzuhbewahren, von denen es in die mit Wasser gefüllte Wanne oder Waschbecken stürzen könnte, tauchen Sie es nie ins Wasser oder andere Flüssigkeiten.

• Es ist nicht gestattet, das Gerät während des Bades zu nutzen.

• Do not use abrasive and solvents to clean the unit.

Concentrator attachment

- Connect the concentrator attachment (1) to the housing of the unit. This attachment allows directing narrow air flow of high intensity to a certain strand of hair.

- Do not place or store the appliance in places where it can fall into a tub or sink that is filled with water; do not immerse the unit into water or other liquids.

- Plug the unit. Use the switch (3) to set the required operation mode.

Cleaning and care

The unit is intended for household usage only.

- Set the switch (3) to the "0" position and disconnect the hair-dryer.

- When children or disabled people use a hair-dryer it is necessary to be especially careful. Children are allowed to use the unit only if they are given all the necessary and clear instructions concerning safe operation of the unit and injuries that may follow due to improper usage of the unit.

- Never immerse the housing of the appliance into water or other liquids.

- Do not use abrasives and solvents to clean the unit.

Storage

- Always unplug the hair-dryer if it is not being used.

- After using let the hair-dryer to cool down and keep it in a dry place away from children.

- Do not use the unit to style wet synthetic hair or wigs.

- Do not direct hot air into your eyes or other parts of your body, which are sensitive to heat.

- Never wind the cord around the hair-dryer. It can cause damage to the hair-dryer. Handle the cord with care, do not pull, twist or strain the cord especially in the area near the plug and at the place where the hair-dryer is entering the housing. Untwist the cord if it has been twisted in the process of operation.

- To make using the appliance comfortable there is a hanger loop (4) on the housing of the unit, you can keep the air openings free of lint, dust and hair vivid.

- Avoid hair getting into air inlet grid during operation of the unit.

- Do not use the unit and do not place the power cord near heating sources.

- Before using the unit unwind the cord at full length.

- The power cord should not:

- touch hot objects,

- run through sharp edges,

- be used as a carrying handle.

- Periodically check the integrity of the power cord.

- Never use the unit if the power cord or plug are damaged, if the unit works electrically or falls into water. Apply to the authorized service centre for repair.

- Before you take the unit away, let it cool down, do not wind the power cord around the unit.

Technical specifications

Power supply: 220-240 V ~ 50 Hz

Capacity: 1200 W

The manufacturer shall reserve the right to change the specification of the appliances without preliminary notice.

Service life of appliance - 3 years

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

This product conforms to the

EMC Requirements as laid down

by the Council Directive 89/336/EWG

and to the Low Voltage Regulation (73/23 EEC)

The unit is intended for household usage only.

ENGLISH

Switching on of the hair-dryer

Before using, make sure that your home electricity supply system corresponds to the voltage specified on the housing of the unit.

Unwind the power cord completely. Insert the plug into the socket.

Use the switch (3) to set the required operation mode:

"0" – off;

"1" – warm air supply for hair drying and soft styling;

"2" – hot air supply for quick drying and sophisticated hair-do;

Hair Care

To get best results (before drying or styling) wash your hair with shampoo, dry it with a towel and comb your hair.

Quick drying

Set the switch (3) to the utmost heating position "2". Shake off from your hair excessive moisture with your hand or a comb and constantly move the hair-dryer over your head.

Safety measures

Read the operation manual, follow all the instructions and keep it for future reference!

To avoid fire hazard or electric shock:

- Before using, make sure that the home electricity supply system corresponds to the voltage specified on the housing of the unit.
- It is not guaranteed that the Gerät auf der Räumlichkeiten zu nutzen.

• Do not use the unit outdoors.

• Use the hair-dryer only for its intended purpose.

• Never

